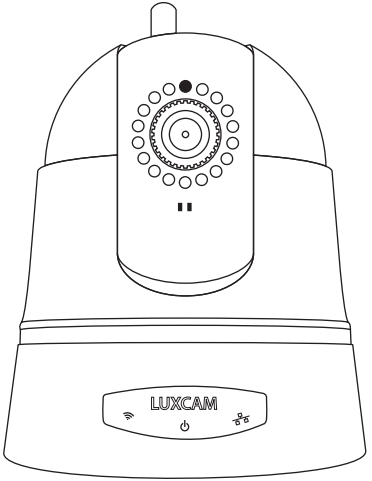

Congratulations on your purchase of this product.

EN
IT
FR
DE
ES

LUXCAM

USER MANUAL

Read this manual carefully and keep it in a safe place for future reference.

This manual contains proprietary information, protected by copyright. All rights reserved.

© Copyright 2015 Luxcam S.A.

TABLE OF CONTENTS

Device layout	3
Package contents	4
System requirements	5
Product features	6
Hardware installation	8
Software installation	9
Technical specifications	11

DEVICE LAYOUT

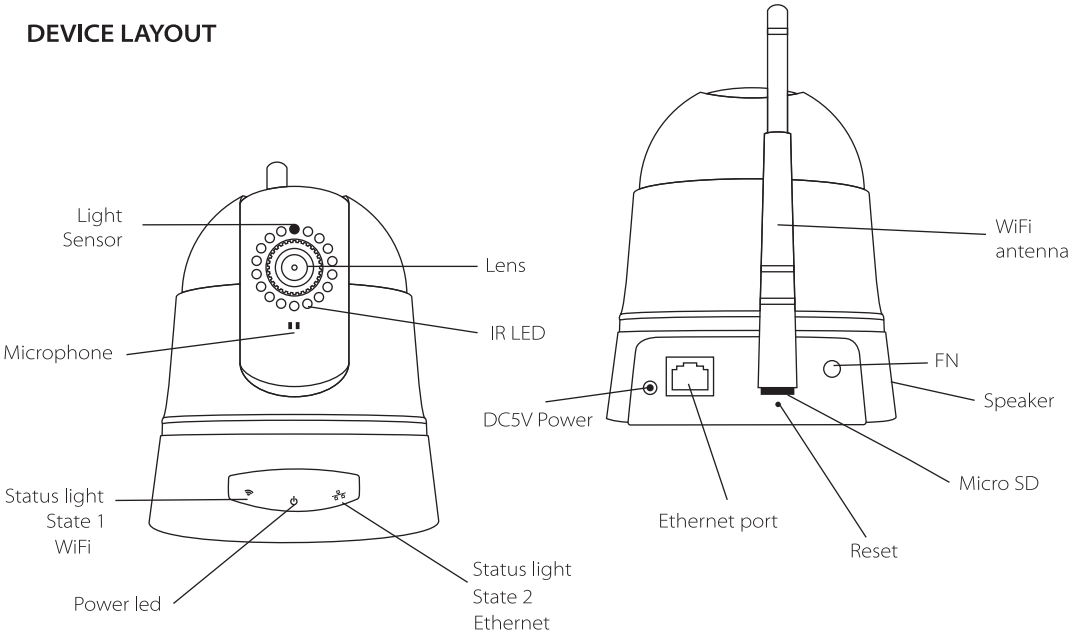

PACKAGE CONTENTS

Unpack carefully. Electronic components can be damaged if improperly handled or dropped.

The package should contain the following items. If anything is missing or appears damaged, contact your dealer immediately.

1.1. Packing list

- Cloud camera
- Ethernet cable
- Power adapter (5V)
- Quick install guide
- Installation kit (Bracket)
- Wireless antenna
- Warranty card

Note: Please use only the power adapter supplied with the Luxcam otherwise the product may be damaged.

SYSTEM REQUIREMENTS

Smartphone/Tablet:

· IOS 5.0 and later;
· Android 2.1 and later.

Browser support:

-Internet Explorer 7 and later;
-Firefox 3.5 and later;
-Safari 4 and Chrome 8.0 and later.

10/100 mbps ethernet or WiFi network connected to internet (for remote internet access)

PRODUCT FEATURES

- Pan-tilt, 350 °, 95 ° rotation.
- Built-in ir led, 10 meters.
- Auto day/night. Ir cut filter.
- Built-in WiFi module for local wireless access.
- Max. support 32 gb microsd card storage.
- PoE (power over internet).
- Motion detection.
- Push notifications (alarm photo/videorecording and external input/output alarm).
- Same encryption protection used by financial industry, (using rsa/dh/des/md5/sha/crc/base64 encryption algorithm).
- Qr code, each machine has a unique id and password for easy setup.
- Multi-user access.
- 2way voice intercom, telecommunication level of signal processing (echo cancellation,noise suppression, voice balance).
- Intelligent transmission technology (adaptive bandwidth, dynamic code rate adjustment, voice priority, jitter buffer).
- P2p technology / plug and play / scan to go. No configuration needed (port mapping, dns, ip address settings).
- Realtime video monitoring / framerate. (25 f/s - 720p).
- Display resolution – HD real-time 1280 x 720 px , normal 640 x 360 , half 320 x 180, small 160 x 90.
- H. 264 video stream, suitable for local and cross-platform internet access.

BRACKET INSTALLATION

CONTENTS INCLUDED:

- Main bracket body
- Adjustable swivel head
- Screws

A) Choose the suitable spot (wall or ceiling).
B) Attach the bracket to the wall or ceiling and secure appropriately using the screws provided.

HARDWARE INSTALLATION

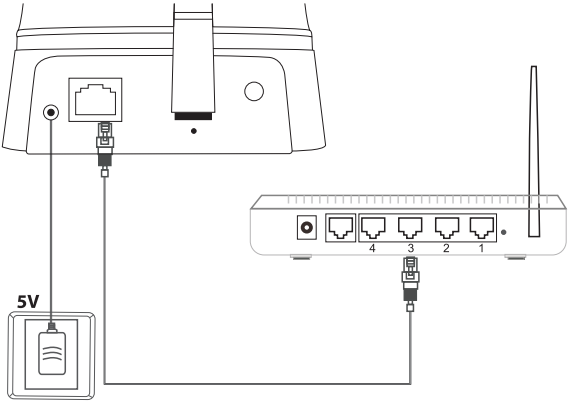

Turn on the camera, connect ethernet cable and the wireless antenna shown above.
Wait 50 seconds, STATE2 will flash green 3 times every 3 seconds.

The camera is now connected. For alarm in/out examples please visit luxcam.eu/support

SOFTWARE INSTALLATION

Use your smartphone or tablet to download the LUXCAM app.

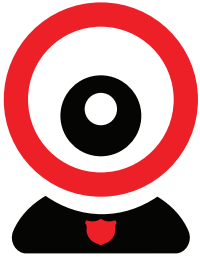

Available on the App Store

For computer use please visit luxcam.eu and download the webapp manual.

1- Use Luxcam as an interphone or babyphone

Turn on Luxcam.
Use your smartphone or tablet to download the LUXCAM app from the app store.
Connect your smartphone or tablet to the Wi Fi network of the LUXCAM (example : “ipc1jfiehfgdk3ik”).
Using LUXCAM app, scan the QR code found in the camera (Username: same as SSID / default password : admin)

2 - Connect Luxcam to your router with an ethernet cable for first setup.

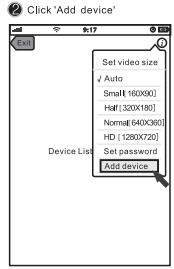

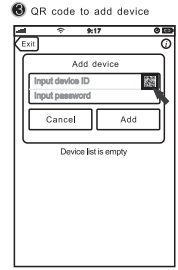

3 - Connect to router using WiFi

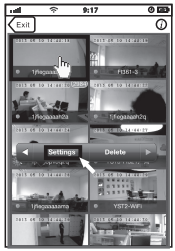

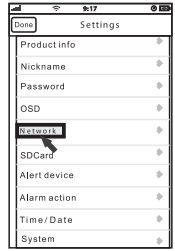

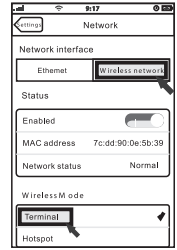

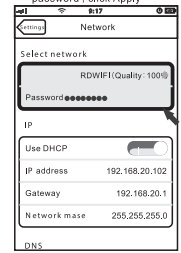

Note: In order to protect your privacy, please change default security settings (admin/password).

TECHNICAL SPECIFICATIONS

Image sensor

Sensor	1/4" CMOS sensor
Resolution	HD 1280 * 720 pixels
Lens	f: 3.6mm, f:2.0
Min. illumination	0.5 lux
Perspective	60°

Video

Video Compression	H.264
Frequency	50Hz, 60Hz
Frame Rate	1-30fps
Image Resolution	1280*720,640*360 ,320*180,160*90
White balance	Automatic
Backlight compensation	Automatic
Night Vision	12 IR LEDs, IR distance: 10 meters

Network

Ethernet	10/100Mbps RJ-45 Interface
Protocol	TCP/IP、UDP/IP、HTTP、SMTP、FTP、DHCP、DDNS、UPNP、RTSP、RTMP、MUTP
Wireless	WIFI(IEEE802.11b/g/n)
IP address	Static IP address, dynamic IP addresses

Other

PTZ rotation	Horizontal: 350 ° & Vertical: 120 °
LED indication	Power / network signal / function
Size(L*W*H)	115(L) *115(W) *135mm(H)
Weight	500g(With bracket)
Certificates	RoHS, CE,FCC

Audio

Input / Output	Built-in mic and speaker
Audio compression	AAC

Alarm

Alarm Detection	Motion Detection
Alarm Notification	Pushup notifications

Hardware Interface

Memory card	Micro SD card (supports up to 32GB)
Power suply	DC 5V/2.0A power consumption < 8W
Audio	Output 3.5mm jack, audio input jack 3.5mm
Button	A reset button, a function button.
Wireless	WiFi external antenna.

Environment

Operating Temperature	0° ~ 55°C (32°F ~ 131°F)
Humidity	10% ~ 80% RH(No condensation)
Storage temperature	-10°C ~ 60° (14°F ~ 140°F)

LUXCAM

Stay close to what you love

www.luxcam.eu

CE FC RoHS